




WIRES AT VARIABLE
WATTAGE CONTROL



WIRES NEAR
REVERB CONTROLS



WIRES FROM
TONE CONTROLS

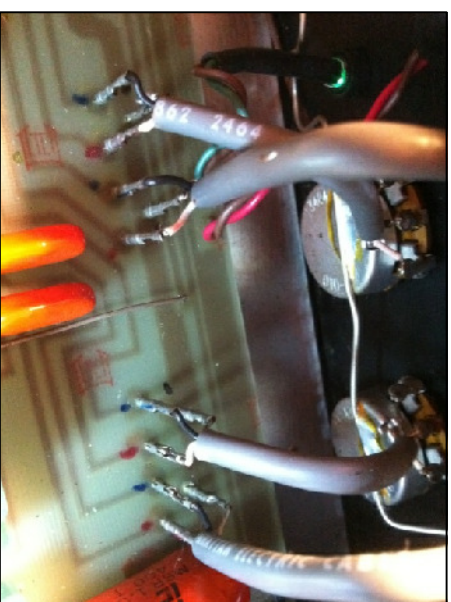

WIRES AT VOLUME AND
MASTER VOL CONTROLS



WIRES AT INPUT
JACK

SEYMOUR DUNCAN CONVERTIBLE
FRONT PANEL CONNECTIONS
TO MAIN PCB