


NOTES:

1. LED POWER SUPPLY NOT SHOWN FOR CLARITY. WIRE THEM IN PARALLEL AND USE CURRENT LIMITING RESISTORS AS REQUIRED PER YOUR VOLTAGE SCHEME.
2. WIRING SHOWN FOR DIST + REVERB INSTEAD OF HOW FACTORY DID IT (REVERB AND/OR DIST.)
3. ENCLOSURE SIZE SHOWN IS HOW I MADE MINE. MY INTENT WAS TO MAKE IT AS COMPACT AS POSSIBLE USING WOOD COMPONENTS.
4. CARLING STYLE DPDT FOOTSWITCHES SHOWN.

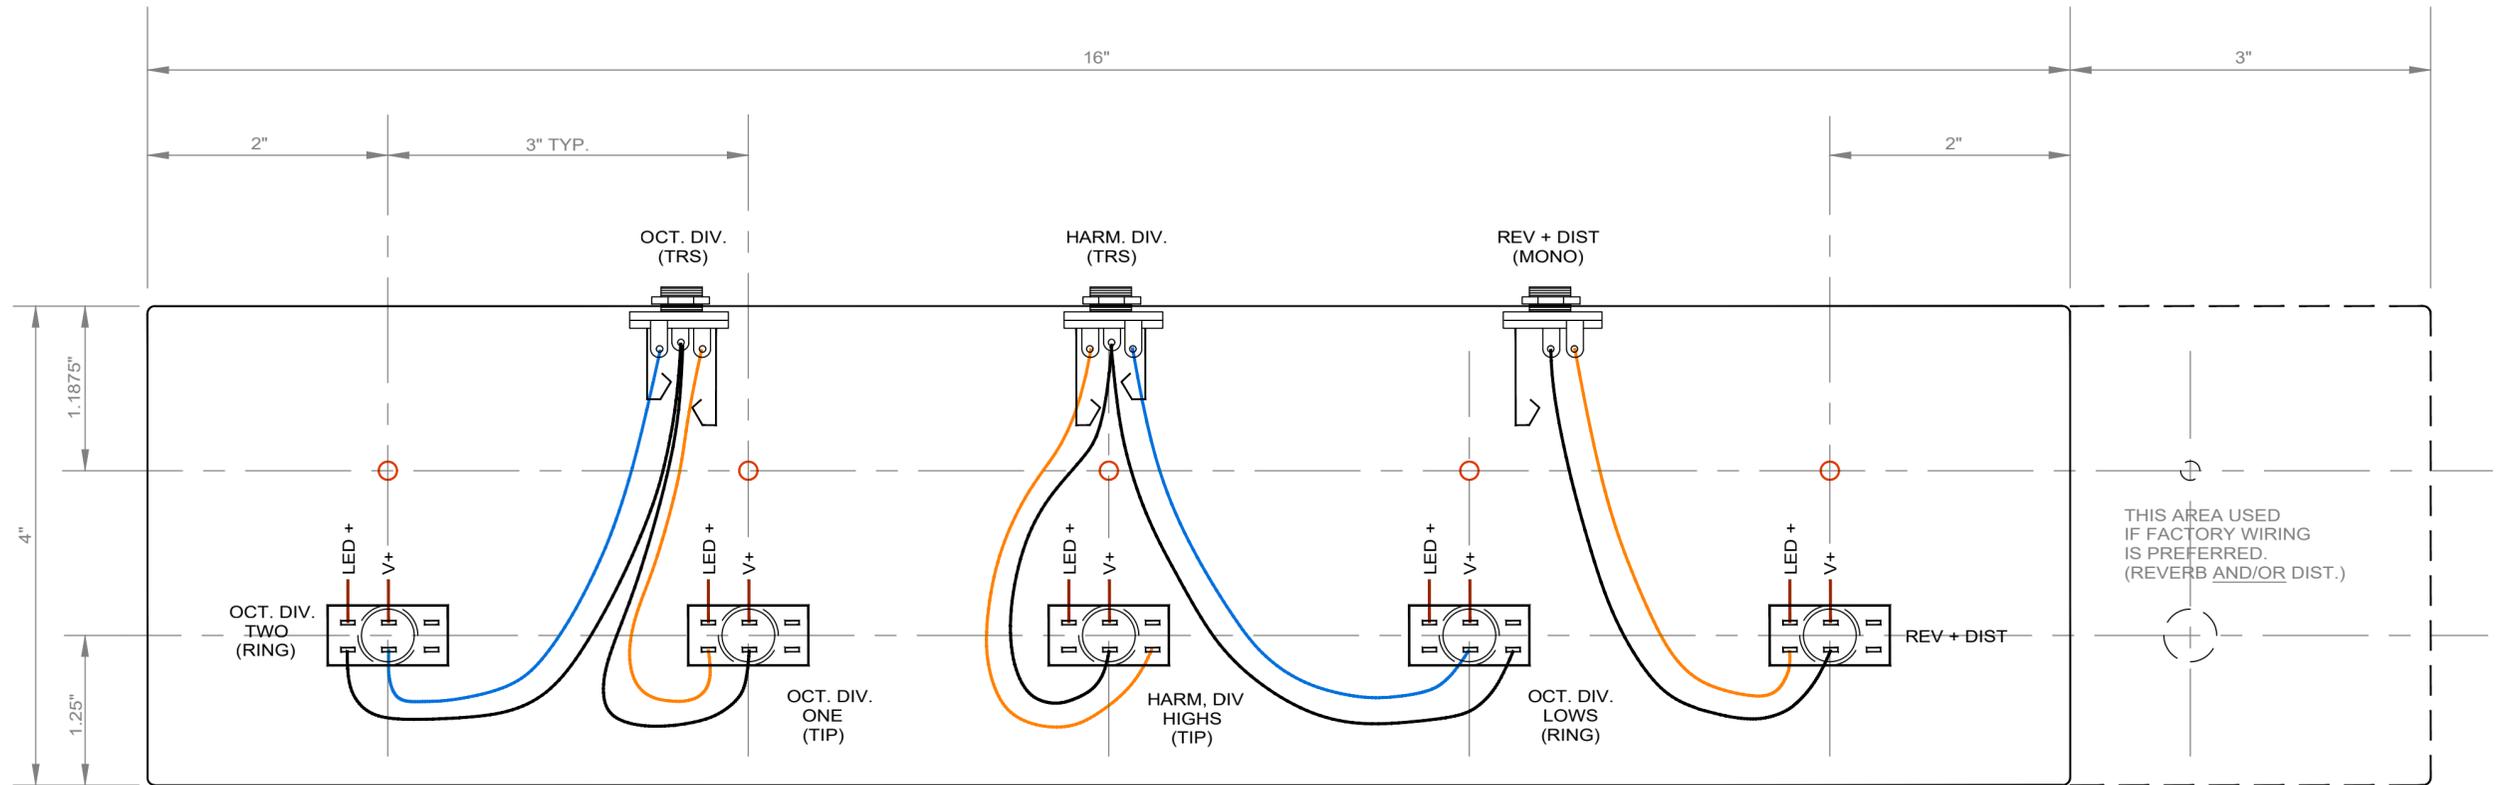

### DIY POLYTONE FOOTSWITCH LAYOUT

Draw by Paul Marossy 1/2/2025  
THIS DRAWING IS APPROX. LIFE SIZE AT 24"x18" SHEET SIZE